


Glass tip


19 mm of clear 9 mm tube. Perforated screen across the bore, and a slot cut at a long oblique to start the roll.

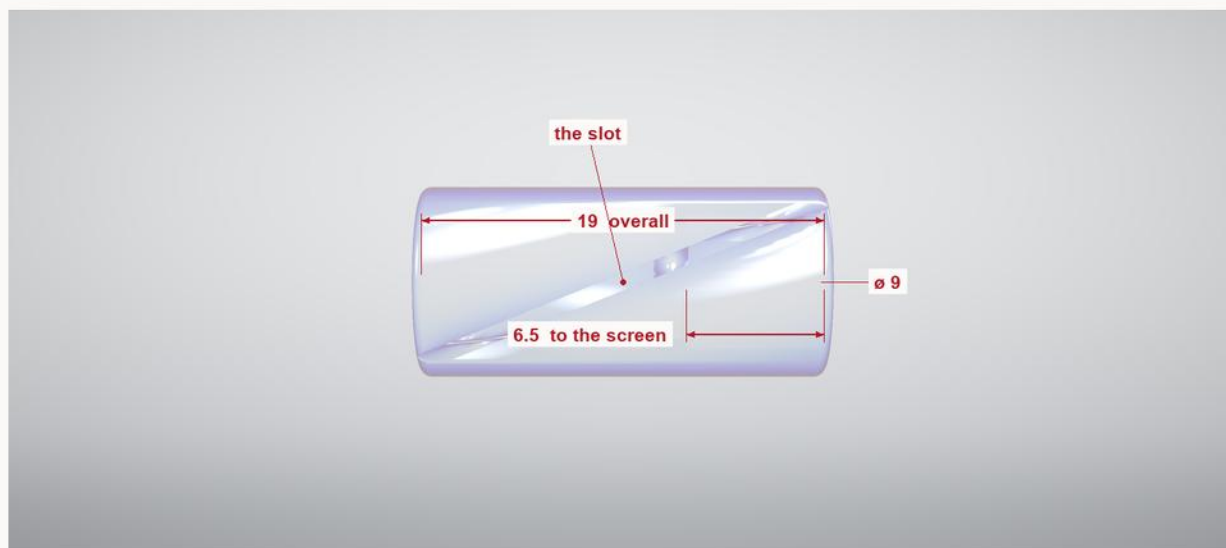

Down the bore
seven holes, one centre


Overall length
19 mm
Outside diameter
9 mm
Bore / wall
6.4 / 1.3 mm
Screen
1.5 thick, 6.5 in
Screen holes
seven $\varnothing 1.25$
Slot
0.75 wide, 1.9 deep
Slot rake
68° off the axis
Glass
clear boro 3.3, $\approx$ 1.4 g

ROLLING

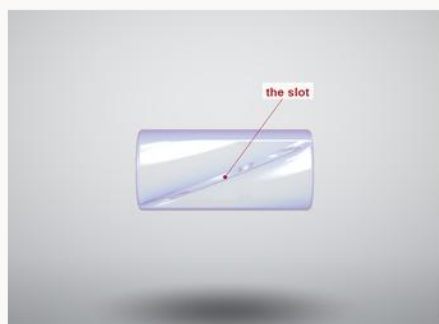

One

The slot runs at a long diagonal across the tube.

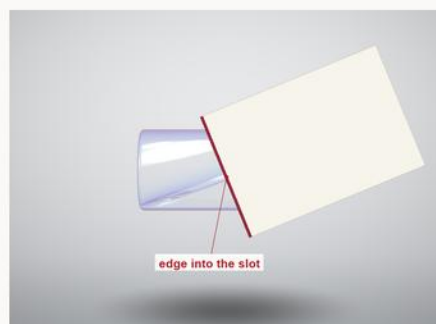


Two

Slip the leading edge of the paper into it. The slot holds the paper on its own.



Three

Roll the tip. The paper winds on, and the rake starts the wrap slightly off-square - the bias a cone wants.

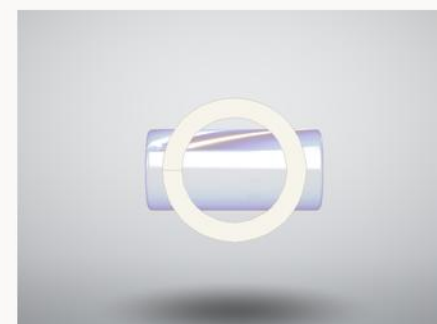

Four

Wound on and filled. The screen keeps it from pulling through, and the tip washes and goes again.